


Instructions for building 3D Printed Toyota Key Casing

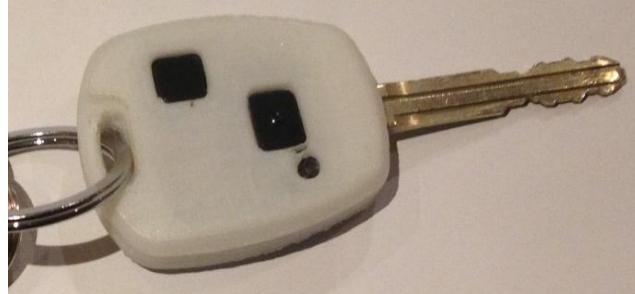

Finished Key Casing Top



Finished Key Casing Bottom

Material Weight - 9 gramme

Build time - 37 minutes each part

Requires 4 screws #4*10 CSK

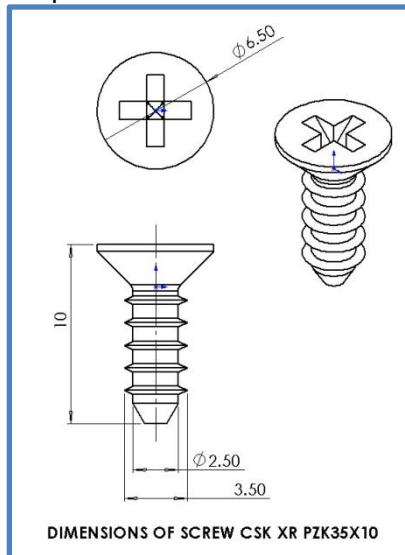


Figure 1 - Parts Ready for Assembly - Broken key casing in background.
Remote control module not shown.

Build Instructions

Print each part

Clean up the holes using 2.5 mm drill for top cover, 3.5 mm and 6.5 mm drill for base.

(Hint - use very low speed on power drill - the drill bit may bite. You only need to clean out the hole.)

Fit the key into the slot in the bottom cover.

Secure using the M2 screw from the original casing.

Fit the cover - Secure with the 4 CSK Screws